Environmental Protection Agency

- (6) "This locomotive conforms to U.S. EPA regulations applicable to Tier 3 line-haul locomotives."
- (7) "This locomotive conforms to U.S. EPA regulations applicable to Tier 4 switch locomotives."
- (δ) "This locomotive conforms to U.S. EPA regulations applicable to Tier 4 line-haul locomotives."
 - (E) The useful life of the locomotive.
- (F) The standards/FELS to which the locomotive was certified.
- (iv) You may include other critical operating instructions such as specifications for adjustments or reductant use for SCR systems.
- (d) You may add information to the emission control information label as follows:
- (1) You may identify other emission standards that the engine/locomotive meets or does not meet (such as international standards). You may include this information by adding it to the statement we specify or by including a separate statement.
- (2) You may add other information to ensure that the locomotive will be properly maintained and used.
- (3) You may add appropriate features to prevent counterfeit labels. For example, you may include the engine's unique identification number on the label
- (e) You may ask us to approve modified labeling requirements in this part 1033 if you show that it is necessary or appropriate. We will approve your request if your alternate label is consistent with the requirements of this part.

 $[73\ FR\ 37197,\ June\ 30,\ 2008,\ as\ amended\ at\ 73\ FR\ 59189,\ Oct.\ 8,\ 2008]$

§1033.140 Rated power.

This section describes how to determine the rated power of a locomotive for the purposes of this part.

(a) A locomotive configuration's rated power is the maximum brake power point on the nominal power curve for the locomotive configuration, as defined in this section. See §1033.901 for the definition of brake power. Round the power value to the nearest whole horsepower. Generally, this will be the brake power of the engine in notch 8.

- (b) The nominal power curve of a locomotive configuration is its maximum available brake power at each possible operator demand setpoint or "notch". See 40 CFR 1065.1001 for the definition of operator demand. The maximum available power at each operator demand setpoint is based on your design and production specifications for that locomotive. The nominal power curve does not include any operator demand setpoints that are not achievable during in-use operation. For example, for a locomotive with only eight discrete operator demand setpoints, or notches, the nominal power curve would be a series of eight power points versus notch, rather than a continuous curve.
- (c) The nominal power curve must be within the range of the actual power curves of production locomotives considering normal production variability. If after production begins it is determined that your nominal power curve does not represent production locomotives, we may require you to amend your application for certification under \$1033 225
- (d) For the purpose of determining useful life, you may need to use a rated power based on power other than brake power according to the provisions of this paragraph (d). The useful life must be based on the power measured by the locomotive's megawatt-hour meter. For example, if your megawatt-hour meter reads and records the electrical work output of the alternator/generator rather than the brake power of the engine, and the power output of the alternator/generator at notch 8 is 4000 horsepower, calculate your useful life as 30,000MW-hrs (7.5 × 4000).

§ 1033.150 Interim provisions.

The provisions of this section apply instead of other provisions of this part for a limited time. This section describes when these provisions apply.

(a) Early availability of Tier 0, Tier 1, or Tier 2 systems. Except as specified in paragraph (a)(2) of this section, for model years 2008 and 2009, you may remanufacture locomotives to meet the applicable standards in 40 CFR part 92 only if no remanufacture system has been certified to meet the standards of